

Niut™

Bring your own...



HOW TO USE

Make sure to charge your finger vibrator before use. Keep it in your bag to secure your next orgasm wherever, whenever with whoever.

Press and hold the button to turn on the vibrator. Use the button to explore the 10 different vibrations to ensure you use the right one for you or your partner.

Press and hold one of the buttons to turn off the vibrator.

After use, don't forget to clean your finger vibrator with our Sex toy cleanser. Keep it your bag, where you easily can grab it when you're ready for your next orgasm.

HOW TO CHARGE



Insert the charging cable to the hidden port.



The LED on your fingervibrator will pulse to indicate it is charging.

WASTE & RECYCLING

According to WEEE, this pleasure object should be taken to a recycling station for recycling electrical and electronic equipment.

